


TECHNICAL DATA SHEET

ECM ELECTRIC CONTACT PRESSURE CONTROLLERS



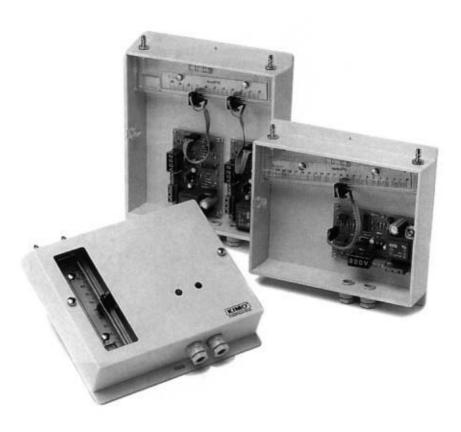

KIMO has designed and manufactured the ECM electric contact pressure controller to combine the inherent reliability and accuracy of the liquid column manometer with electronic switching.

The operating principle gives unrivalled preformance when compared to traditional pressure controllers.

The KIMO ECM electric contact pressure controllers excel where it is necessary to monitor small variations in low pressures of air or gas and where accurate and reliable monitoring is essential.

The ECM is widely used in pharmaceutical laboratories, clean rooms and other area's where good performance is essential.

- Positive, negative and differential pressure measurement, with the option of 1, 2 or multiple electric contacts on the same scale.
- Electric contacts from 0,5 mm H2O (5 Pa).
- Delay adjustable from 0 to 45 seconds.
- Contact rating: 3A at 230 V. 50 Hz.
- Operation of the contact on rising or falling pressure, by using the inverter function.
- Simple pressure setting by cursor on graduated scale.
- Max. static pressure of 6 bar, when used on differential pressure.
- Pressure and switching points continuously displayed.
- Switch position indicated by LED.

FEATURES AVAILABLE

	Scale in	Scale length	Liquid Ref. Standard		Minimum	Min. separation	
Réf.	mm H2O	for 1 mm H2O	and density	version	setting	between 2 contacts	
Inclined							
ECM 88	8-0-8	8 mm	AWS10 D = 0,87	1 or 2 contacts	< 0,10 mm CE	< 0,5 mm CE	
ECM 22	20-0-20	4 mm	"	"	< 0,25 mm CE	< 1mm CE	
ECM 10	0-10	12 mm	"	"	< 0,10 mm CE	< 0,5 mm CE	
ECM 20	0-20	8 mm	"	"	< 0,10 mm CE	< 0,5 mm CE	
ECM 40	0-40	4 mm	"	"	< 0,25 mm CE	< 1 mm CE	
ECM 60	0-60	3 mm	"	"	< 0,50 mm CE	< 1,5 mm CE	
Vertical							
ECM 100	0-100	1 mm	11	1 contact	< 1 mm CE	-	
ECM 150	0-150	1 mm	"	1 or 2 contacts	< 1 mm CE	< 4 mm CE	
ECM 200	0-200	0,5 mm	Volt 1S D = 1,86	1 contact	< 2 mm CE	-	
ECM 300	0-300	0,5 mm	"	1 or 2 contacts	< 2 mm CE	< 8 mm CE	

Delivered empty in cardboard packing with appropriate manometer liquid, 2 screws, fixing bolts and operations for use.

SPECIFICATION

MANOMETER:

- Operation: pressure (+), vacuum(-), differential pressure (P).
- Scale: vertical or inclined.
- Man ometer: transparent altuglass M.70, thickness 15 mm.
- Liquid column drilled Ø 4 mm.
- Scale: transparent altuglas M.70, section 20 x 2 mm.
- Graduation : black printing.
- -Zero Ajustment by moving the graduated scale, up to 10 mm, clamping by nickeled brass thumb screw.
- Integral spirit level for horizontal setting.
- Manometric liquid: AWS.10, density 0,87 red or Volt 1S, density 1,86 blue depending on the model.
- Connection: clear tube Ø 5 x 8 mm on nickeled brass serrated connections or direct on the instrument, threading 1/8 gas.
- Maximal static pressure: 6 bars.
- -Reading accuracy: $\pm 1\%$ of the inclined scale; $\pm 0.5\%$ of the vertical scale.

UF 313-1 AMPLIFIER :

- Power supply: 230 Vac, 110 Vac, 24 Vdc or 24 Vac.
- Relay outputs :inverter electrical contact R.T. 3A/230V \sim 50 Hz.
- Consumption: 50 mA.
- Indicating light: red LED which indicates the relay contact position. Switch-on = Lit
- Mi cro-switch: Inverter switch for inverter function (see operating).
- Delay: potentiometer (one rotation), setting from 0 to 45 seconds.
- Sen sitivity: potentiomèter (one rotation) permits adjustment of photo electric sensor for different manometer liquids.
- Limit operating temperature: -5 to +50°C.
- Electrical connection :screw terminals and gland CM6P, cover PE7.
- Dimension: 110 x 70 mm. Weight: 140 g.

PHOTO-ELECTRICAL CURSOR :

- Optical signaling mechanism: photo-electric transmitter-receiver connected to: the amplifier by optical fiber.
- Transmitter : infra-red light.
- Not sensitive to other light sources.
- Size : altuglas dim. 30 x 15, length 10 mm.
- Setting : by location on the graduated scale.
- Knurled locking screw in nickled brass.
- Red mark on the altuglass cursor, for adjustment of the switching point or of reset point.

HOUSING:

- PS shock, ral. 9002, colour: sand..
- Cover: cover front retained by two nickled brass knurled screws.
- Veiwing window : transparent altuglas M.70.
- Fixing : wall mounting by 2 screws. Ø 4 or 5 mm.



OPERATION


The ECM can be fitted to a vertical or inclined manometer. The photo electric sensor is connected to a PCB by an optical fibre. When energised the PCB generates an infra-red ray which travels along the optic fibre and throught the manometers liquid column. The PCB senses when the liquid column breaks the infra-red ray and operates the switch either making or breaking the contact depending on how it is set.

The ECM can operate on rising or falling pressure by changing the position of the "inverter switch" on the PCB.


Diagrams 1 and 2 show the operation principle. The switch operates when the pressure rises and the manometer liquid breaks the infra-red ray at 100 mm H2O also lighting the LED.

When the inverter microswitch is operated (diagram 2) the switch operates when the pressure falls and the infra-red ray is re-established at 100 mm H2O.

The changeover relay enables the power to be switched on or off with a delay of up to 45 seconds. Multiple units can be fitted to one manometer column to perform different functions.

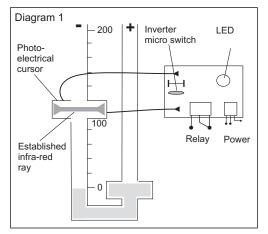


- Manometer to zero.
- Powered PCB.
- "Inverter" micro-switch .
- Established infra-red ray.
- LED off.
- Broken "relay contact"

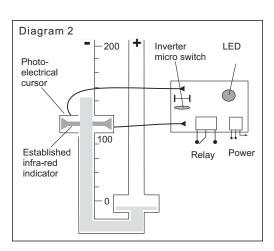


- Manometer pressurised.
- LED on.
- Infra-red ray cut off.
- Made "relay contacts"

CONNECTION




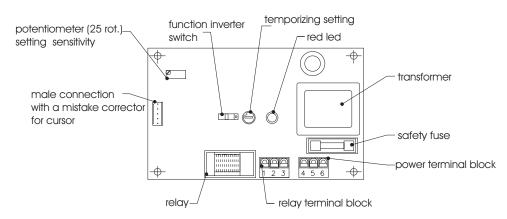

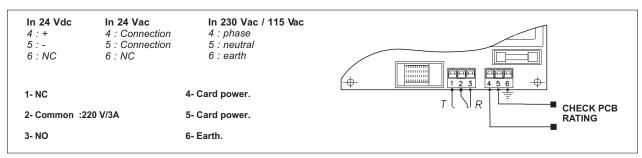

DIMENSIONS

	Version '	1 conta	ac∜1	Version 2 contacts/2			
	Dimension in mm:	Weight	Fixing center	Dimension in mm:	Weight	Fixing center	
Réf.	HxWxT	en g.	EFinmm	HxWxT	in g.	EF in mm	
Inclined							
ECM 88	195 x 204 x 75	820	180	248 x 204 x 75	1080	233	
ECM 22	195 x 204 x 75	830	"	248 x 204 x 75	1100	"	
ECM 10	195 x 204 x 75	820	"	248 x 204 x 75	1080	"	
ECM 20	195 x 204 x 75	820	"	248 x 204 x 75	1080	"	
ECM 40	195 x 204 x 75	830	"	248 x 204 x 75	1100	"	
ECM 60	248 x 204 x 75	1005	233	248 x 204 x 75	1150	"	
Vertical							
ECM 100	195 x 204 x 75	810	180	-	-	-	
ECM 150	248 x 204 x 75	1015	233	248 x 204 X 75	1165	233	
ECM 200	195 x 204 x 75	830	180	-	-	-	
ECM 300	248 x 204 x 75	1030	233	248 x 204 x 75	1180	233	

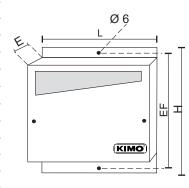

ACCESSORIES

0)

- ECM electronic card : Power supply 24, 48, 110 or 230 V.
- Detection cursor for ECM.
- Connections with security valve type 509.
- Buzzer ECM: 75 dB power-sound buzzer.

SPECIAL APPLICATIONS



KIMO can make to order, all types of electric contact pressure controllers of the "photo-electric cursor with relay contacts" type with 3, 4, 5 contacts or more.

Different contacts, scales, and other densities possible.

Special designs for detecting high levels in vats.

ECM can be supplied without cover, and can be mounted on a support to be installed safety housings.

We have the instrument you need.

Consult us.

SERVICE



The ECM do as not need any particular service. We simply recommend that the indicator liquid is changed every year, to ensure the photo electric cell work properly.

www.kimo.fr

EXPORT DEPARTMENT

BP 48. Bld de Beaubourg - Emerainville F-77312 MARNE LA VALLEE CEDEX 2 - FRANCE

Tel: 33. 1. 60. 06. 69. 25 Fax: 33. 1. 60. 06. 69. 29 e-mail: kimo.export@kimo.fr



Distributed by:

Ref. FT Ang - ECM - 09/01 B